


Inflator Maintenance

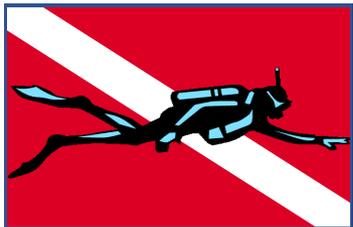

Inflator Maintenance



Background Story:

On a reef, far, far away...an issue arose.

Power Inflator or K-valve:





Inflator Maintenance



How does the Power inflator work

<https://www.youtube.com/watch?v=fYctxJZRUpU>

How to service diving BCD “Power Inflator”

https://www.youtube.com/watch?v=bfzkfXgnf_M



Inflator Maintenance



Maintaining the Power Inflator valve (and your BDC):

1. Rinse the BCD in fresh water after using (especially after using in salt water). Be sure to work the valve buttons while the BCD is in the rinse water to help flush any salt that might have built-up on plungers and seals in the valve.
1. Run water through the inflator, and into your BCD, using a BC washout or flush wash hose – this will also allow you to rinse out the inside of your valve and rinse the BCD and the purge valves on the BCD when you drain the water out.
2. Always store the BCD with a little air in it to keep the bladder from sticking together inside it.



Inflator Maintenance




BC washout or flush wash hose:





Inflator Maintenance

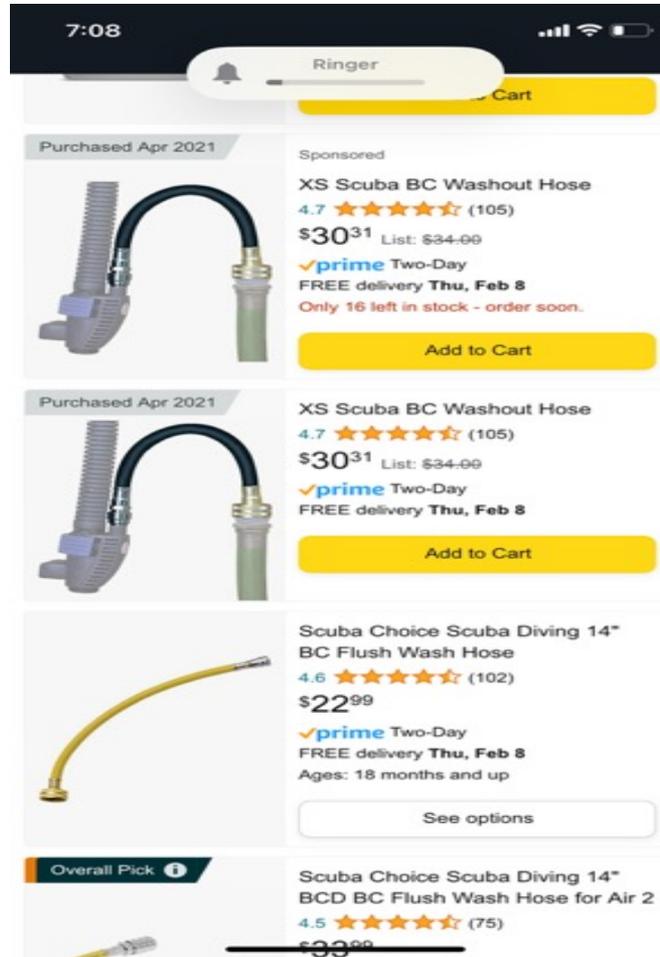



Inflator Maintenance

